



# Multi-Span Clamp - SI-0515 S Clip - SI-0990-X Series


1. Assemble the Multi-Span Clamp to the strand using a standard can wrench. With your back to the house, orient the tab away from you and the house. Position the drop cable so that the messenger is towards your chest. Sag up the cable. Push the tab between the messenger and the cable.

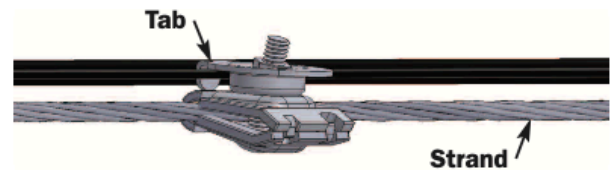


2. Use the tab as a tool to separate the messenger from the cable.

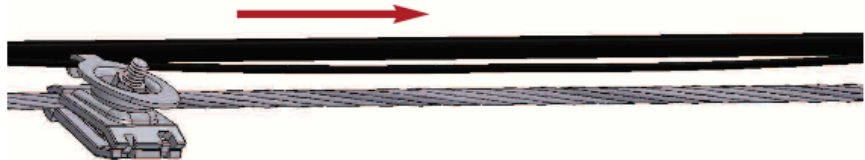


3. Wrap the messenger around the Multi-Span Clamp once.

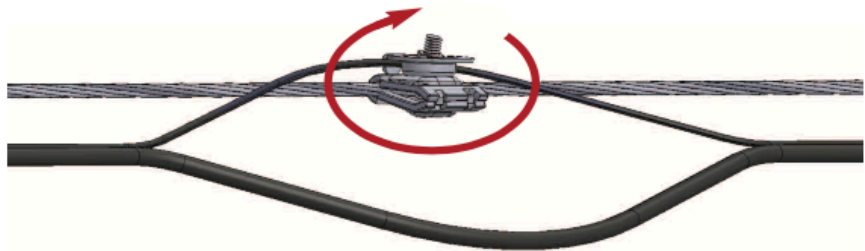

4. Assemble two S Clips (SI-0990 for RG 6 and SI-0990-2 for RG 11) to the drop cable to prevent further separation of the messenger from the cable.

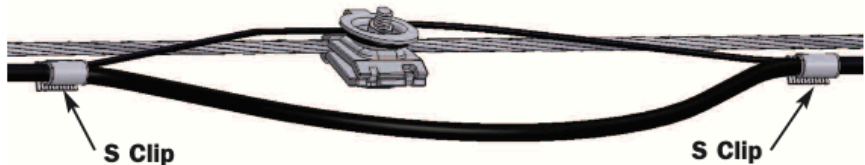

5. Put the side with ridges on the messenger. Put the other side on the cable.

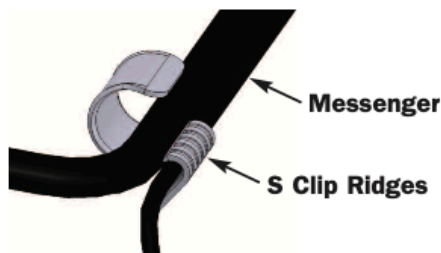

6. Squeeze the S Clips closed with your fingers. The S Clips are made of soft aluminum and will easily close. Do not use a tool as it could damage the cable.

**For technical assistance or to request samples, please call 800-350-1650**