


MACLEAN SENIOR INDUSTRIES

PRODUCT APPLICATION BULLETIN

Messenger Drop Clamp - SI-0969 (Patented)

1. Separate the messenger wire from the cable using the **end edge** of the messenger drop clamp.

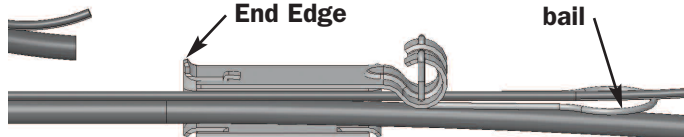


2. Side feed the cable and messenger wire as shown, so that the clamp **bail** is between the cable and the messenger wire.

3. Grasp the separated end of the messenger wire and cable with one hand and grip the clamp body with your other hand. Then, pull the clamp back in a straight line, separating the desired length of messenger wire needed to terminate the messenger wire, about 15 to 18 inches.




4. Pull the messenger wire around the curved bending surface in the indented guide as shown, toward the rear of the drop-side of the clamp.


Note: If at the house end of the drop, this will be done while tensioning or "sagging" the drop.

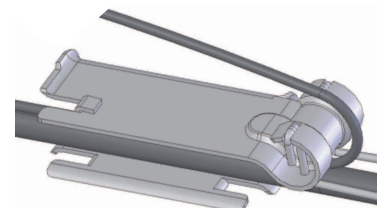


5. Lock the messenger wire through the **A Slot**, as shown. Continue to lock the messenger wire diagonally through the **B Slot**, as shown. Terminate the messenger wire through the **C Slot**, as shown and cut the excess wire away, or bond it to the strand using the SI-0515MB Messenger Bonding Multi-Span Clamp.

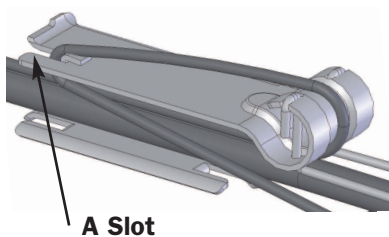

A Slot

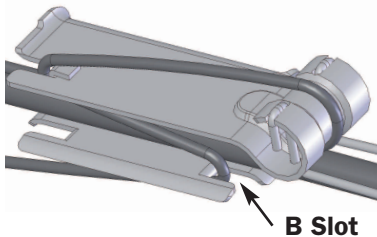

B Slot

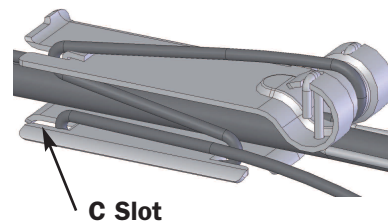

C Slot

For technical assistance or to request samples, please call 800-350-1650

MacLean Senior Industries, LLC

610 Pond Drive, Wood Dale, IL 60191

Phone: 800-350-1650 • Fax: 630-350-1654

Web: www.macleanseniorindustries.com • E-mail: sales@seniorindustries.com

© MacLean Senior Industries, LLC All rights reserved.

