Universal Ground Strap SI-0954 Series (Patented)
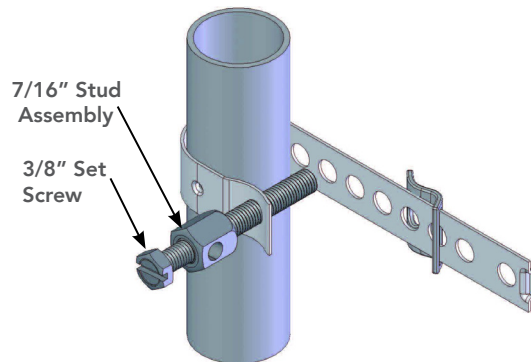
Installation Instructions:

STEP 1.

Perforated Holes

S Nut
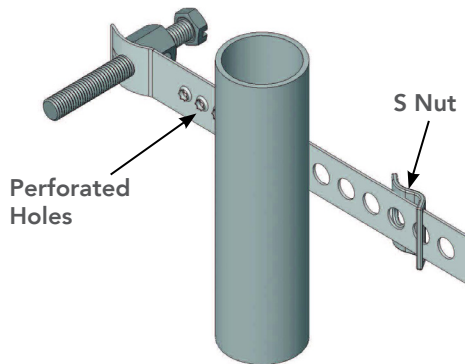
Position ground strap as shown.
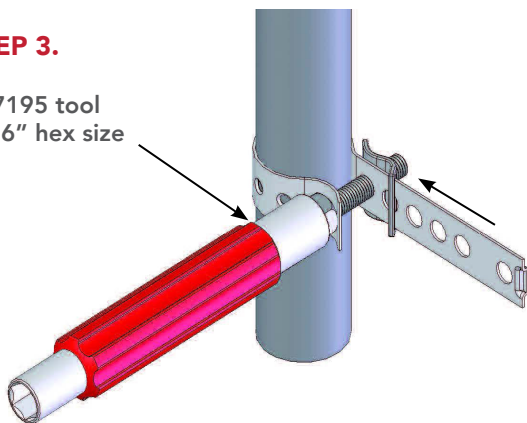
STEP 2.

7/16" Stud Assembly

3/8" Set Screw

Wrap ground strap around pipe and align set screw stud assembly to match closest hole to pipe on opposite side of ground strap.
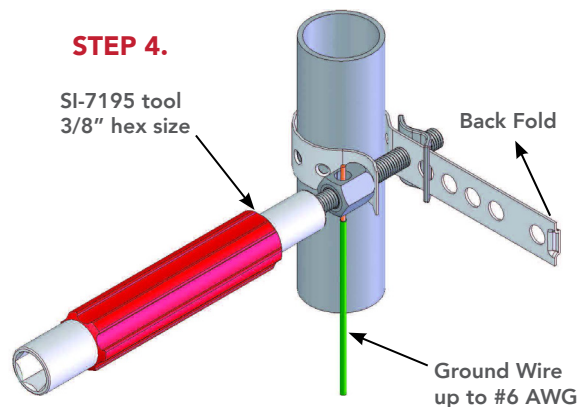
STEP 3.

SI-7195 tool 7/16" hex size

Slide S captive nut to align with set screw stud assembly. Tighten stud assembly firmly around pipe using SI-7195 tool.

STEP 4.

SI-7195 tool 3/8" hex size

Back Fold

Ground Wire up to #6 AWG

Release top set screw and insert up to a #6 AWG copper ground wire. Tighten set screw firmly to secure the ground wire using SI-7195 tool. Thread end of ground strap through slot of ground tag SI-TAG-100 and fold back any excess ground strap.

Other Lengths Available

SI-0954-6	*Ground Strap Copper, 6" in length*	**SI-0954G-6**	*Ground Strap Galvanized 6" in length*
SI-0954-9	*Ground Strap Copper, 9" in length*	**SI-0954G-9**	*Ground Strap Galvanized 9" in length*
SI-0954-9	*Ground Strap Copper, 12" in length*	**SI-954G-12**	*Ground Strap Galvanized 12" in length*

10/5/2021